

RIMA


CNC-Maschinen

Bedienungshandbuch


WELE AA-Series



b. AA1680/AA1880

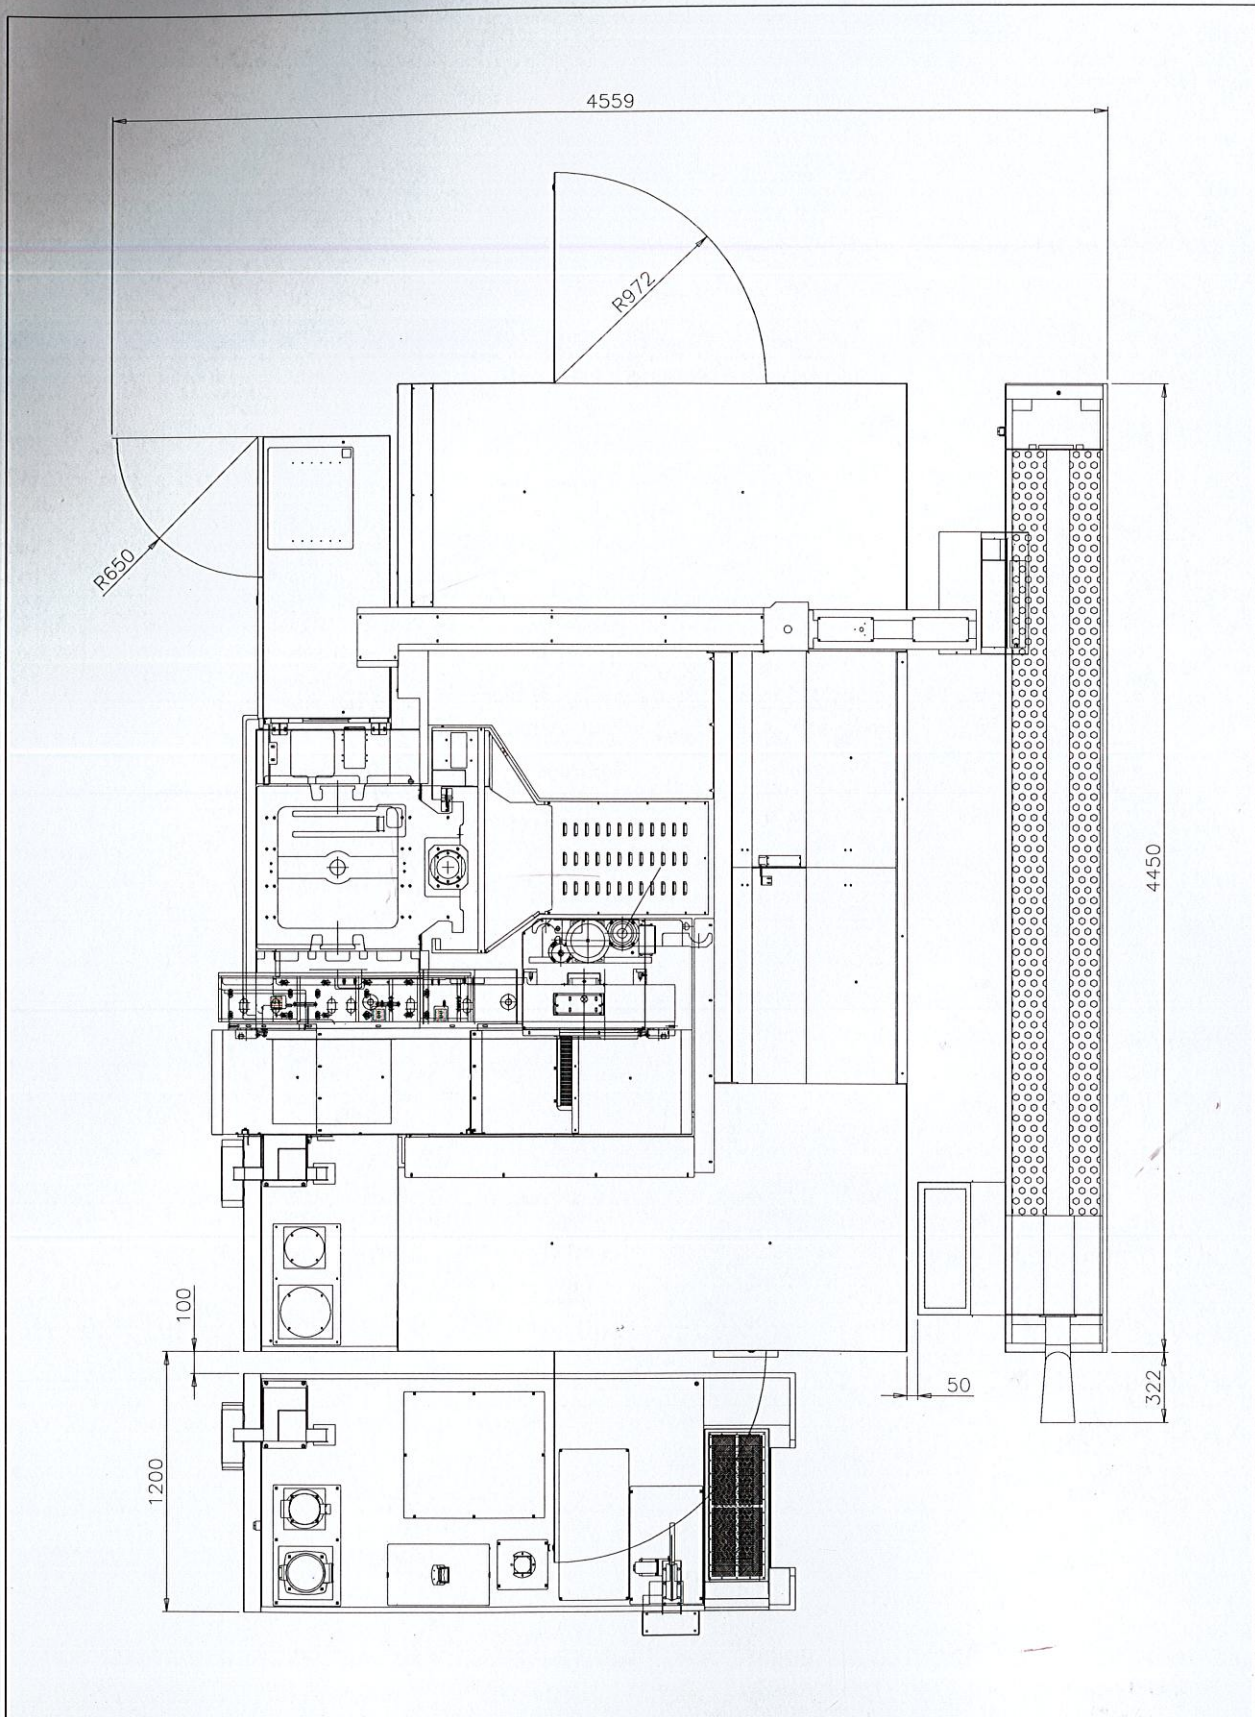

2.11 Working Range

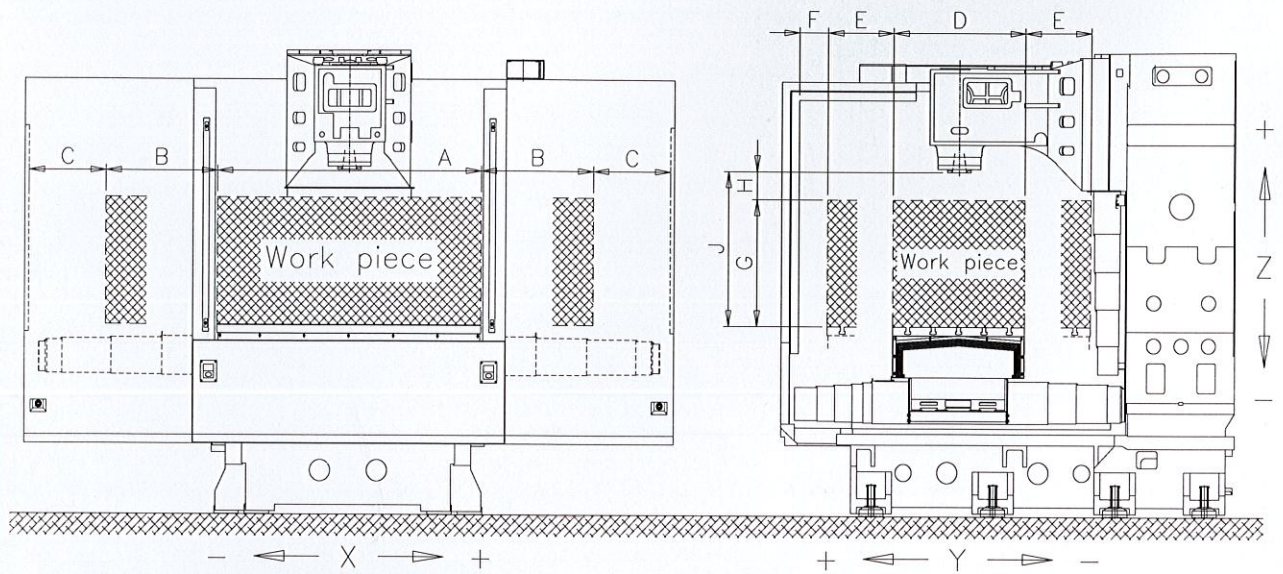


Model	Table area	T-slot size	Travel: X-Y-Z	A	B	C	D	E	F	G	H	J
AA1480	1550x800	5x18x150	1400x800x700	1550	700	513	800	400	217	695	205	200~900
AA1680	1750x800	5x18x150	1600x800x800	1750	800	513	800	400	242	795	205	200~1000
AA1880	1950x800	5x18x150	1800x800x800	1950	800	413	800	400	242	795	205	200~1000

3. Installation

3.1 Space Required

3.1.1 Machine size

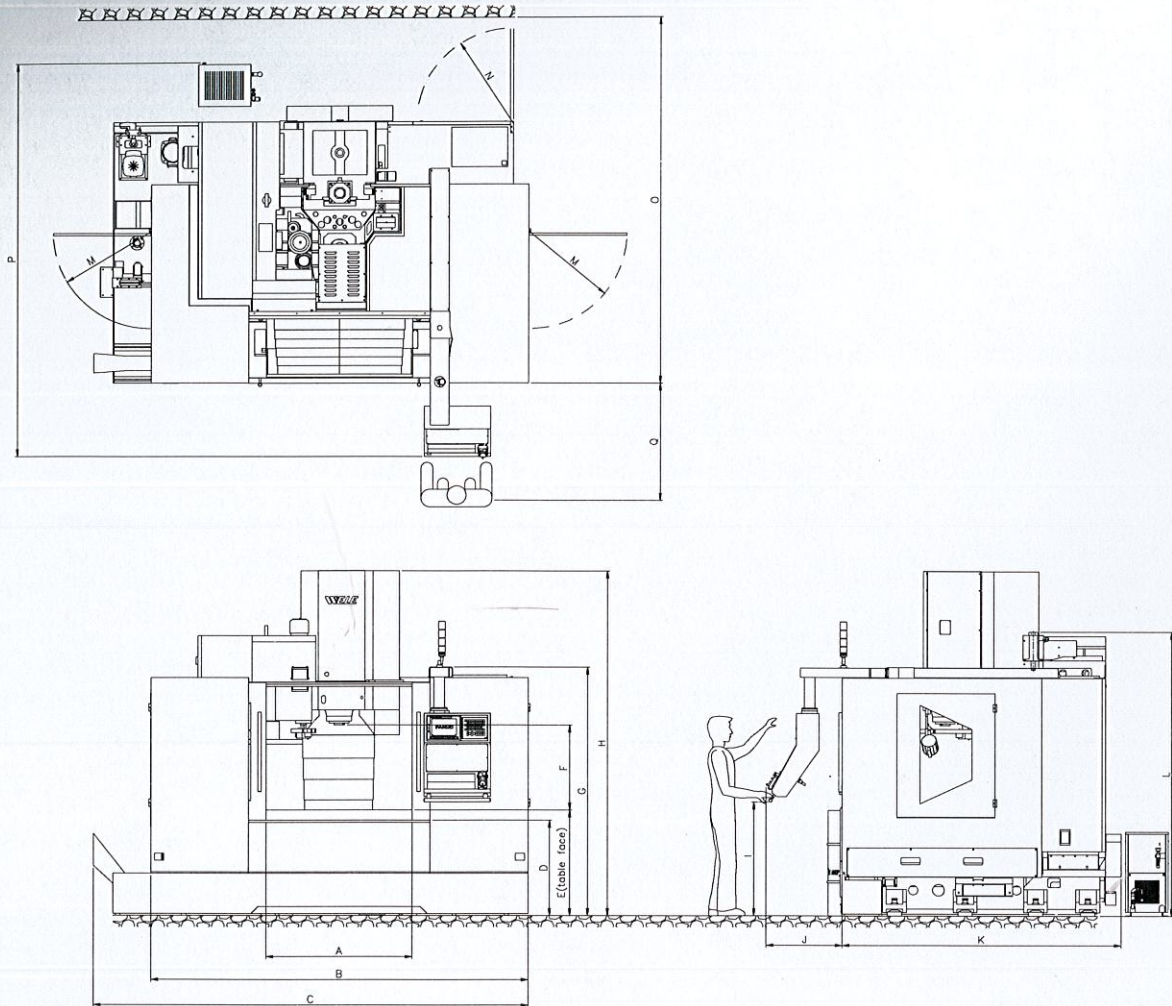

	A	B	C	D	E	F	G
AA1480	1570	4050	4250	762	1000	900	2435
AA1680	1770	4450	4650	803	1036	1000	2506
AA1880	1970						

	H	I	J	K	L	M	N	O	P	Q *
AA1480	3343	980	620	3100	2910	972	650	3525	3720	1000
AA1680	3478	1050	620	3140	3056	972	650	3620	3760	1000
AA1880										

* We recommend a separate seat be setted for over 1 hour operation.
The position should be located about "Q"mm away from the machine.

b. AA1680/AA1880

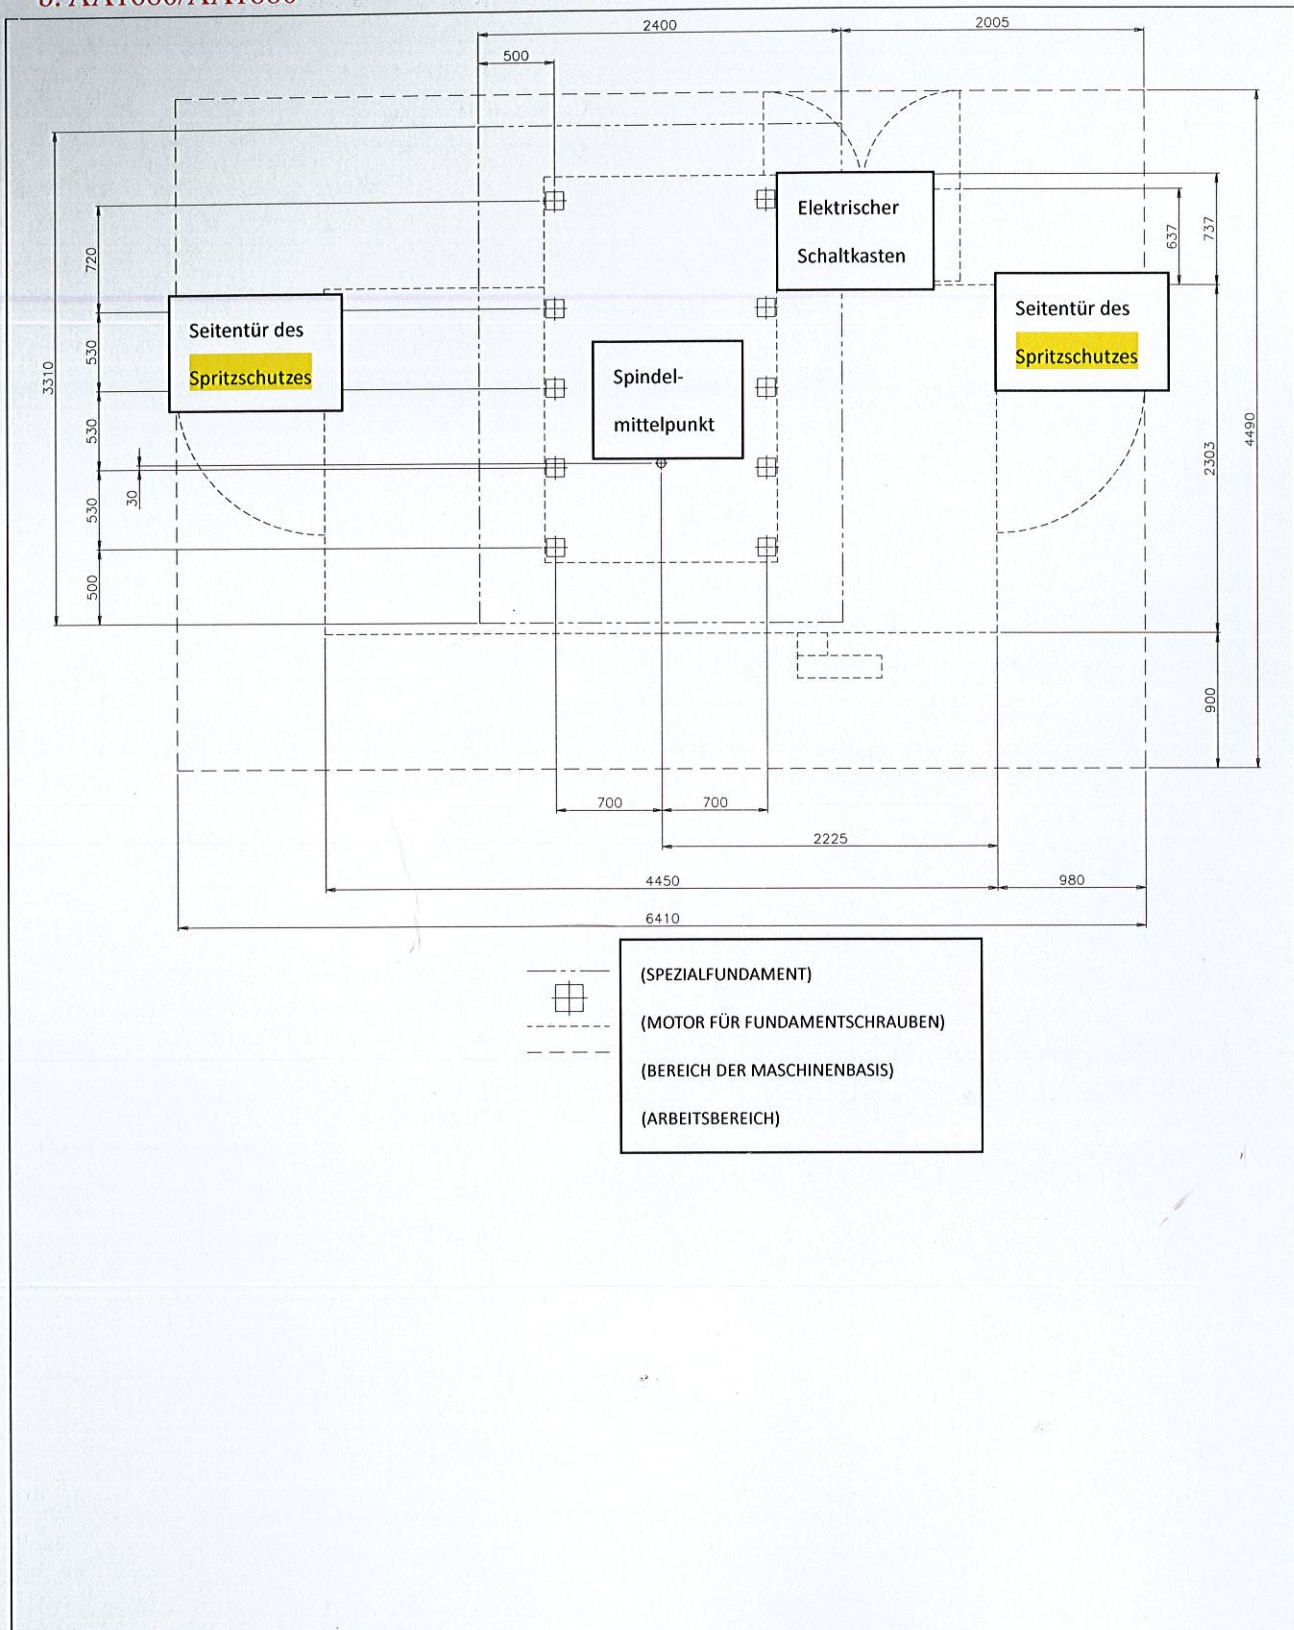
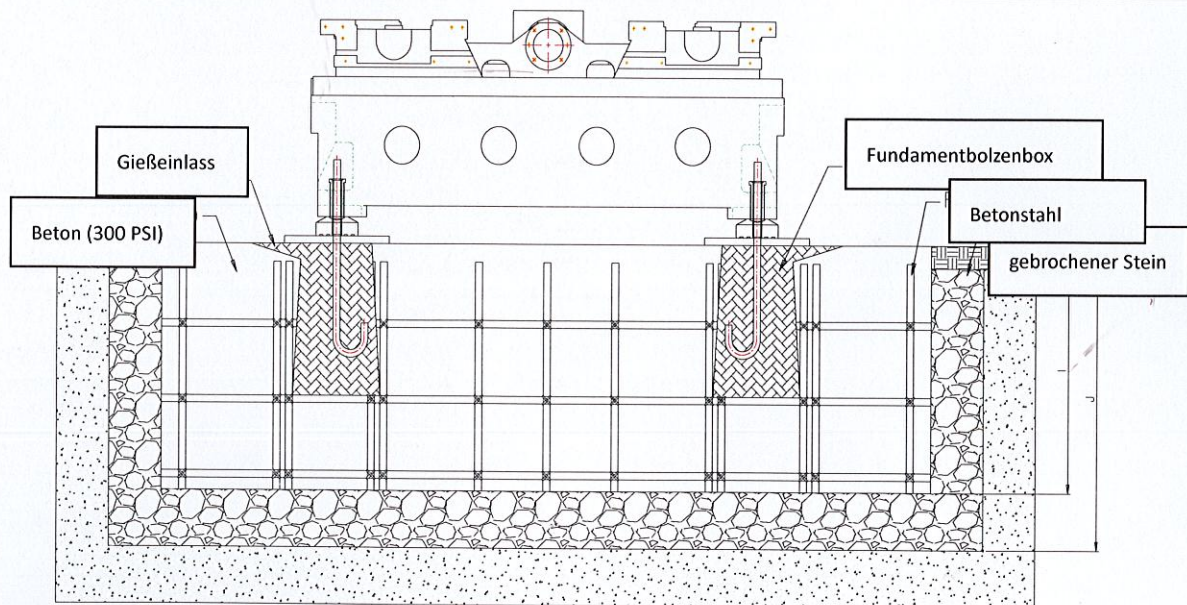
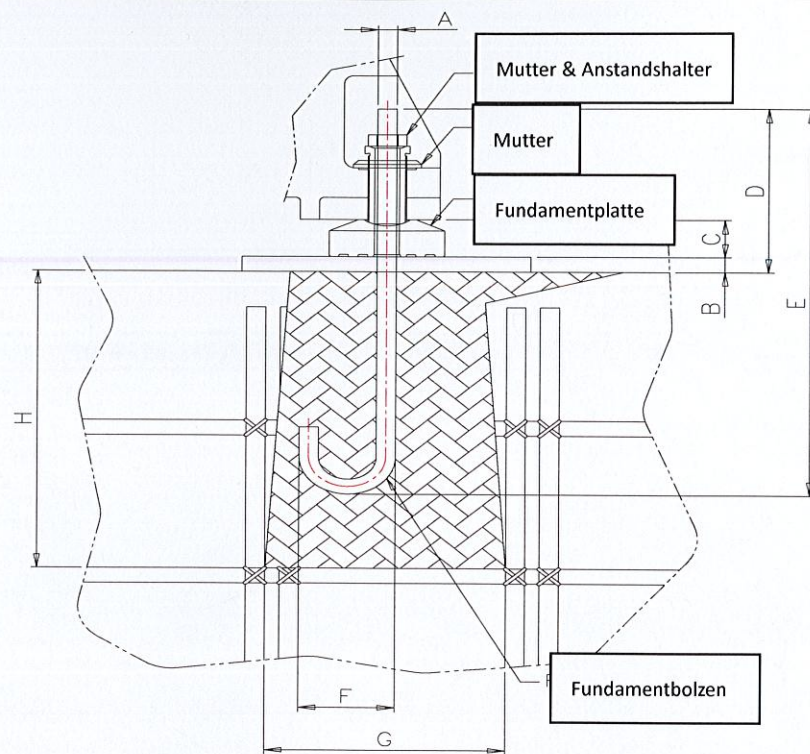


Tabelle 3-1 Diagramm Ankerschraube

Modell	Einheit	A	B	C	D	E	F	G	H	I	J
AA-Reihe	mm	20	20	30	220	520	100	250	400	650	800

4.1.2 Machine weight

Model	AA1480	AA1680	AA1880
Weight (kg.)	12,000	16,000	18,000

4.1.3 Hoisting diagram

